

Instruction Manual UPGRADE KIT to transform an existing mask to a conductive foil mask by the fencer himself



1. Front and inside view of the Upgrade Kit with red double- sided tape. Please cut the round part of the kit to get 6 segments.



2. Take off the red cover from the double- sided tape.




3. Make a dot with a pencil 1,5 to 2 cm below the chin area of the mask.



4. Fold up the upgrade kit in the middle, with the tape outside. Press the center of the kit to the mask just at the dot you've marked before.



5. In the areas of the double-sided tape, firmly press the kit onto the bib.

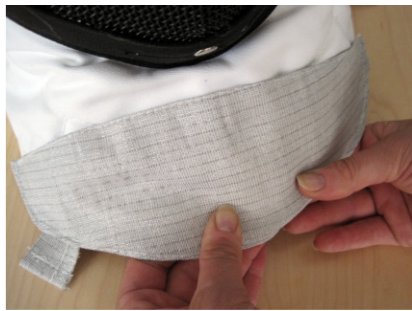


6. Fold the center part of the white band to the inside of the mask and firmly press it to the inside of the bib.



7. Repeat this procedure with the rest of the white band going from the center to the outside.



8. This is the result.

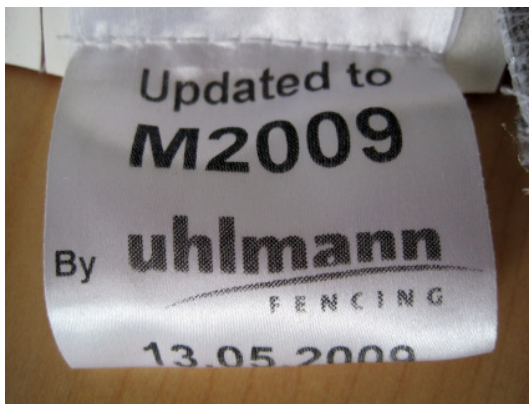

9. Label to confirm up- date: M2009 upgrade kit by Uhlmann (Date)